

Get *Started*

 
All you need to know to get going.



LG VIPER[™]4GLTE



Welcome!

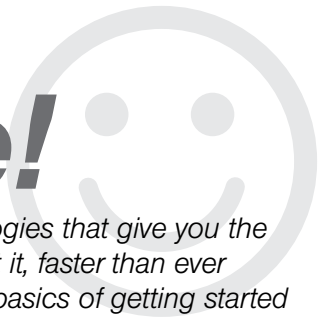



Sprint is committed to developing technologies that give you the ability to get what you want when you want it, faster than ever before. This booklet introduces you to the basics of getting started with Sprint and your LG Viper 4G LTE™.


Visit sprint.com/support for the complete User Guide, along with videos, tutorials, and community forums for your phone.


Using This Guide

This Get Started guide is designed to help you set up and use your new LG Viper 4G LTE™. It's divided into four sections to help you find the information you need quickly and easily.

 
 
 **Get Ready** — page 1 — Find out what you need to do before you use your device the first time, including inserting a battery and activating Sprint service on your device.

 **Android Basics** — page 4 — Learn some basics about how to move around on your device, use the home screen, and enter text. If you're familiar with Android devices, you can probably skip these pages (although a refresher course never hurt anyone).

 **Use Your Device** — page 14 — Take advantage of your device's features and Sprint services, from the basics (Making Calls) to the more advanced (using Android Market, WiFi, and more).

 **Tools & Resources** — page 30 — Find useful tips for your device and discover resources and other helpful Sprint information. For additional information including the full User Guide, videos, tutorials, and community forums, visit sprint.com/support.

Your LG Viper 4G LTE™

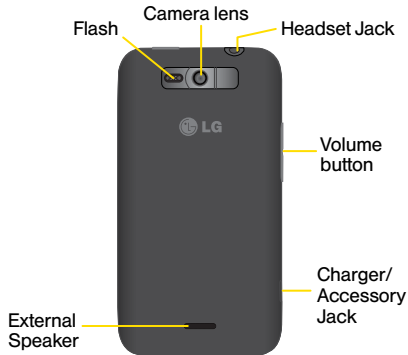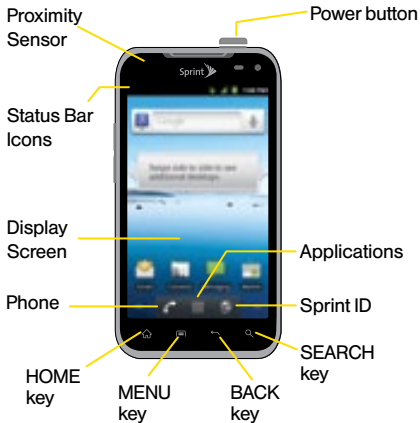

Get Your Device Ready

Install the Battery

1. Remove the battery compartment cover on the back of the device.
2. Align the battery's contacts with those inside the battery compartment and gently press down until the battery is seated.
3. Replace the back cover.


Charge the Battery

1. Insert the USB cable into the charging head.
2. Insert the small end of the USB cable into the Charger/Accessory Jack.
3. Plug the charging head into a standard AC power outlet.

Turn the Device On

- Press and hold the power button..

Unlock the Screen

- Drag  to the right to unlock.

Activate Your Device

Activate Your Device

- If you purchased your device at a Sprint Store, it is probably activated and ready to use.
- If you received your device in the mail, and it is a new Sprint account or a new phone number, your device is designed to activate automatically when you first turn it on. You will see a **Hands Free Activation** screen at startup. When it's finished, tap **OK** to continue. To confirm your activation, make a phone call.
- If you received your device in the mail and it is going to be activated on an existing number (you're swapping phones), go to sprint.com/activate and follow the instructions.

When you have finished, make a phone call to confirm your activation. If your device is still not activated or you do not have access to the Internet, contact Sprint Customer Service at **1-888-211-4727** for assistance.

Turn the Screen On and Off

- To quickly turn the display screen off, press the power button on top of the device.
- To turn the screen on and display the unlock screen, press the power button.

Turn the Device Off

- Press and hold the power button and then tap **Power off > OK** to turn the device off.

Setup Application



The setup application helps you set up various options and applications, including setting up your Google™ account.*

Complete the Setup Application

1. When you see the **Welcome** screen, tap the android icon to begin.
 - **Set up your Google Account** – Create or sign in to your Google account.
 - **Use Google location** – Tap the check marks to select your Google location options.
 - **Backup and restore** – Choose whether or not to back up data with your Google account.
2. Tap **Finish setup**. You will see a **Welcome to your Sprint device** screen.
3. Follow the onscreen prompts to learn about your Home screen. (See "Your Home Screen" on pages 6 - 7.)

**You do not need to sign up for a Google account to use your device; however, to download applications from Android Market, you must link your device to a Google account.*

Switch to Spanish Menu (optional)

1. Press  >  and tap **Settings** > **Language & keyboard**.
2. Tap **Select language** > **Español**.

Android Basics: Getting Around Your Device

 
Move Around Your Device's Menus and Screens Using Gestures

Your device's touchscreen lets you control everything through various types of touches, or gestures.

Tap: When you want to type using the onscreen keyboard, select items such as application and settings icons, or press onscreen buttons, simply tap them with your finger. A light touch works best.

Press and hold: To display the available options for an item simply touch and hold the item.

Flick: Move your finger in lighter, quicker strokes than swiping. This finger gesture is always used in a vertical motion, such as when flicking through contacts or a message list.

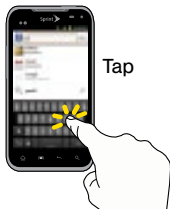

Swipe or slide: Quickly drag your finger vertically or horizontally across the screen.

Drag: Press and hold your finger with some pressure before you start to move it. Do not release your finger until you have reached the target position.

Rotate: Activate the auto-rotate feature to automatically change the screen orientation from portrait to landscape by turning the device sideways.

 
Swype: This unique feature allows you to enter a word by sliding a finger from letter to letter, lifting only between words. See page 10 for instructions on using this text input method.



Swipe, Slide or Drag



Rotate

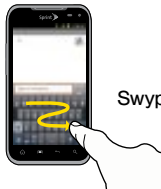


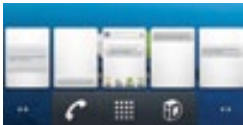 
Swype

Your Home Screen

Viewing Your Home Screen

 
Your device's Home screen extends horizontally to five full screens. This gives you room to customize your device and put the things you need front and center, just a swipe away.

- To display the main (center) Home screen, press  from any screen.
- To view extended screens, swipe the screen left or right. There are two additional screens on each side of the main Home screen.
- To display thumbnails of all five screens, press and hold one of the extended screen icons. Tap a thumbnail to display the screen.



Status Bar


The status bar at the top of the Home screen lets you quickly see both your device status (connections, signal strength, battery, GPS) and any current notifications.

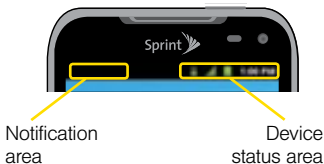



Notifications Panel

You can expand the notification area to provide more detailed information about the current onscreen notification icons.

1. Tap the status bar to reveal the Notifications tab, and then drag the tab to the bottom of the screen to open the Notifications panel.
2. Tap a notification entry to open the associated application.

Note: The Notifications panel can also be opened on the Home screen by pressing  and then tapping **More > Notifications**.

Customize Your Home Screen

1. Press  >  and tap **Add**.
2. On the Add to Home screen, touch the item you wish to add (**Shortcuts, Widgets, Folders, or Wallpapers**).

For example, to add a Power Control widget:

 
1. From the Add to Home screen, tap **Widgets > Power Control**.
2. If the widget is too large for the free space on the screen, slide to a screen with sufficient space, and repeat step 1.

From your new Power Control widget, you can turn wireless capabilities (WiFi, Bluetooth, GPS, Sync, Brightness) on and off, and adjust the screen brightness.

Buttons and Keys



LG Viper 4G LTE™ Buttons and Keys

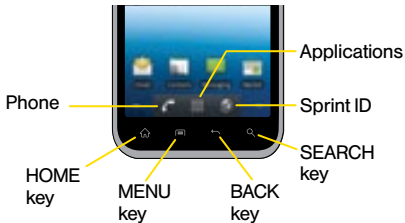The bottom front of your device contains a row of four static keys that let you perform specific functions. Above the buttons, there is a program-dependent row of keys (they're always available from the unlocked Home screen).



- **Home Key** (🏠) – Press to return to the main Home screen.
- **Menu Key** (☰) – Press to open context-specific menus.
- **Back Key** (↶) – Press to return to the previous screen view.
- **Search Key** (🔍) – Press to launch a search within the current screen or application.
- **Phone Button** (📞) – Tap to open the phone screen.
- **Applications Button** (📱) – Tap to display the applications list.
- **Sprint ID Button** (iD) – Tap to add, remove, and switch between ID packs.


Open Applications

- If an application is on one of your Home screens, just tap it to open it.
- If an application is not available from your Home screen, press  (if you're not already on the Home screen), tap  to display the applications list, and then tap the application from the alphabetical list. You may have to scroll down to find the application you're looking for.



Access Recently-Used Applications

Your device keeps a running list of your eight most recently used applications.

1. Press and hold  to open the recently-used applications window.
2. Tap an icon to open an application.


Entering Text With the Onscreen Keyboard

 
Your QWERTY Keyboards

There are two versions of onscreen keyboards available on your Viper 4G LTE™: the Android keyboard and Swype (default), which uses a unique gliding method to let you enter whole words quickly. When you select a field that requires text or numbers, an onscreen keyboard will appear so you can enter the information, or type your message. (If you don't see the keyboard when, for instance, you're entering contact information, just touch the field you're working on to bring it up.) The device's onscreen QWERTY keyboards can be used in either portrait or landscape mode.

Text Entry with Your Swype Keyboard


1. Touch an onscreen character, and then, while maintaining your finger onscreen, drag to the next character in the desired word.

2. Repeat this process until the desired characters have been drawn over. Select from an onscreen list of possible word matches (if prompted). This occurs if your current swype has generated more than one possible word match. For tips on using Swype, touch  and follow the onscreen information.

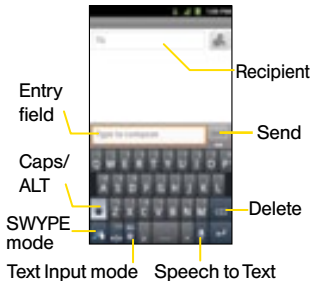

Your Swype Keyboard Settings

You can customize your onscreen keyboard settings to suit your needs:

Press  and tap **Settings > Language & keyboard > Swype** and select from the following options:

 
- **Select Input Method** allows you to choose either the Swype keyboard or the Android keyboard.
- **How to Swype** gives you quick and easy steps for using Swype.
- **Personal dictionary** to manage your personal dictionary.
- **Preferences** allows you to view and modify Swype settings:
 - **Audio feedback** turns on/off sounds generated by the Swype application during use.
 - **Vibrate on keypress** activates a vibration as you enter text.
 - **Show tips** turns on an onscreen flashing indicator that provides helpful usage information.

- **Auto-spacing** automatically inserts spaces between words. When you finish a word, just lift your finger to start the next word.
- **Auto-capitalization** automatically capitalizes the first letter of the first word in a sentence.
- **Show complete trace** determines whether to show the entire path formed by the letters you are sliding over to form a given word.
- **Word suggestion** (predictive text) uses a built-in word database to predict your desired words while entering text in Swype.
- **Speed vs. accuracy** sets how quickly Swype responds to your onscreen input. Move the slider between **Speed** (fast response) or **Accuracy** (error tolerance) and touch **OK**.
- **Reset Swype's dictionary** allows you to delete all the words you've added to Swype's dictionary.
- **Version** displays the current software version.


Language Options allows you to select the current text input language. Default language is US English.

Entering Text With the Onscreen Keyboard

Your Android Keyboard

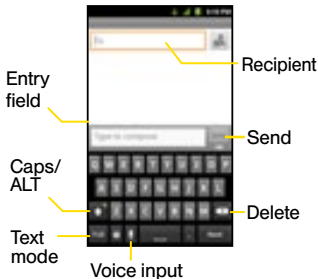



Text Entry with the Android Keyboard


Note: To switch from the Swype keyboard (default) to the Android keyboard, press  and tap **Settings > Language & keyboard > Select input method > Android keyboard**.

Entering text with the onscreen Android QWERTY keyboard is easy: just tap the letters to type the words.

1. From a screen where you can enter text, tap the input field to reveal the onscreen keyboard.
2. With the Android keyboard as your text entry method, select one of the following text mode options:
 - **ABC** to use alphabetic characters from the onscreen keyboard.
 - **?123** to enter numbers by pressing the numbers on the onscreen keyboard.
 - **Voice Input** allows the device to use its built-in voice recognition software to hear your voice and transcript it directly into text.
3. Tap the corresponding onscreen keys to begin typing your word.

If you make a mistake, tap  to erase a single character. Touch and hold  to erase all previously entered words.

Your Android Keyboard Settings






Press  and tap **Settings > Language & keyboard > Android keyboard** to access the Android keyboard settings such as:

Vibrate on keypress, Sound on keypress, Popup on keypress, Touch to correct words, Auto-capitalisation, Show settings key, Voice input, and Input languages.


Word suggestion settings include:

Quick fixes, Show suggestions, and Auto-complete.

Make a Phone Call

1. If the screen is locked, drag  to the right side of the screen.
2. Press  and tap  **Phone**.
3. Tap the digits of the number you want to call on the phone keypad. (The number will appear just above the keypad as you enter it. Tap  to delete one or more digits.)
4. Tap .

Answer an Incoming Call

- Drag  to the right on the screen.

Send a Call Directly to Voicemail

- Drag  to the left.


Mute the Ringer on a Call

- Press the volume button on the left side of the phone to mute the ringer.

Use Your Device: Voicemail

Set Up Your Voicemail


All unanswered calls are automatically transferred to your voicemail, even if your phone is in use or turned off. You should set up your voicemail and personal greeting as soon as your phone is activated:

1. Press  and tap **Voicemail**.
2. Follow the voice prompts to create your password and record your name and greeting.

Voicemail Password
(do not share): _____

Sprint strongly recommends setting a voicemail password. Without a password, anyone who has access to your phone can access your messages.

Retrieve Your Voicemail




1. Press  and tap **Voicemail**.
2. Tap a message to listen to it.

From any other phone:


1. Dial your wireless phone number.
2. When your voicemail answers, press *****.
3. Enter your password.

Messaging

Send a Text Message



1. Press  and tap **Messaging** .
2. Tap **New message**, or press  and tap **Compose**.
3. Enter a phone number, email address, or contact name in the To: field. (If the device recognizes a contact, you'll see a list. Touch the contact to complete the address.)
4. Tap **Type to compose** and then type your message.
5. When you are finished, tap **Send**.

Send a Picture or Video Message (Multimedia Messaging)

1. Follow steps 1 – 4 for sending a text message.
2. Press  and tap **Attach**.
3. Tap a media type (such as Pictures, Videos, Audio, etc.) and then tap an available album.
4. Tap a picture or clip to select it. (For Audio, tap **OK**.)
5. If you are satisfied with your message, tap **Send MMS**.

Note: For information on taking pictures and videos with your device, see "Camera & Camcorder" on page 20.

Access Messages

1. Press  and tap **Messaging** .
2. From the Messaging screen, tap the message you want to view.

–or–

1. Open the **Notifications** panel.
2. Tap the message you want to view.

All your of text and MMS messages for a contact are collected in an ongoing "conversation," so when you view a message, you can scroll through the entire history of your messages with that person.



Focus on driving




Be a hero. Don't drive distracted.

sprint.com/focusondriving




Contacts

Your device's Contacts function lets you access and manage contacts from a variety of sources, including Google and Corporate email accounts, contacts synced from your computer, and old-fashioned contacts entered by hand.




Save a Phone Number

1. Press  and tap .
2. Enter a phone number using the onscreen keypad.
3. Press  and tap **Add to contacts** > **Create new contact**.
4. Tap **First name** and **Last name** fields, and enter a name for the new entry.
5. Tap **Mobile** (default) to select a label such as **Mobile**, **Home**, **Work**, **Work Fax**, **Home Fax**, **Pager**, **Other**, or **Custom**.
6. Tap **Done** to complete and save the entry.




Retrieve a Phone Number

1. Press  > **Contacts** , and then press .
2. Enter the first letter or letters of an entry.
3. Tap the contact to display the contact's phone number(s).

Add a New Entry to Contacts

1. Press  and tap **Contacts** .
2. Press  and tap **New Contact**.
3. Tap any field and use the onscreen keyboard to enter the name, phone number, and other contact details.
4. Add more data fields or a picture if desired, and tap **Done**.




Edit a Contact Entry

1. Press  and tap **Contacts**  > [contact you'd like to edit].
2. Press  and tap **Edit contact**.
3. Tap an option:
 - [image icon] to assign a picture to the entry.
 - **First name/Last name** to edit the current name.
 - **Phone** to add or delete a phone number.
 - **Email** to add or delete an email address.
 - **Postal address** to enter a physical address for the contact. Choose from **Home**, **Work**, **Other**, or **Custom**.
 - **Organization** to enter business information such as a company name.
- **More** to add additional categories such as **IM**, **Notes**, **Nickname**, or **Website**.
4. Tap **Done** to save your updates.






Your device's Email applications let you access and manage multiple email accounts simultaneously in one convenient location. Although there is a separate Gmail application, the main email application can manage both Internet-based email services (Gmail™ and Yahoo™) and Corporate Work Email (Outlook®). The device can also be manually configured to connect to other email systems.

Set Up a Gmail Account




1. Press  and tap  > **Gmail** .
2. Follow the instructions to set up or sign in to a Gmail account.

***Note:** Although you need a Gmail account to use certain features such as Android Market, you do not have to use Gmail as the default account for your device.*

Set Up a POP3/IMAP Email Account







1. Press  and tap  > **Email** .
2. Enter the **Email address** and **Password** for the email account.
3. Tap **Next** and follow on the onscreen instructions.

Set Up a Microsoft Exchange ActiveSync Account








1. Press  and tap  > **Email** .
2. Enter your **Email address** and **Password** information and then tap **Next**.
 - Contact your Exchange Server administrator for required sign-in information.
3. Tap **Manual setup**.
4. Tap **Microsoft Exchange ActiveSync** (from the add email account screen).
5. When prompted to provide additional detailed information, scroll down the screen and tap **Next**.

6. Enter a **Domain\Username, Password, and Exchange Server** information.
7. Read the onscreen activation disclaimer and, if prompted, tap **Next**.
8. Configure your **Email check frequency, Amount to synchronize** (days to synchronize between your device and server), and activate any other email settings, and then tap **Next**.
9. Identify your new account with a unique name and provide the outgoing name text then tap **Done**.

Access Email Messages

1. Press  and tap  > **Email**  or  > **Gmail** .
 - If necessary, tap the selection arrow  and tap the email account you want to use.
2. From the inbox, tap the message you want to view.




Send an Email Message

1. Press  and tap  > **Email**  or  > **Gmail** .
2. If necessary, tap the selection arrow  and tap the email account you want to use.
3. Press  and tap **Compose**.
4. Enter an email address in the **To:** field.
5. Enter a subject and a message.
 - To add attachments, tap **Attach** (on the bottom of the screen) and select an attachment.
6. Tap **Send**.





Camera & Camcorder



Take a Picture



1. Press  and tap  > **Camera**.
2. Using your display as a viewfinder, aim the camera lens at your subject, and tap .

View Pictures

1. Press  and tap  > **Gallery** to view the Camera folders.
2. Tap a picture and then tap  to explore other options, including sharing the picture using **Google+**, **Messaging**, **Picasa**, **Bluetooth**, **Gmail**, or **SmartShare**.

Record a Video

1. Press  and tap  > **Camcorder** to activate camcorder mode.
2. Choose a video length recording mode by tapping **MMS** or **Long video**.

3. Using the device's display screen as a viewfinder, aim the lens at your subject, and tap  to begin recording.
4. Tap  to stop recording.

View videos




1. Press  and tap  > **Gallery**.
2. Tap a video icon to view the video.

Share Pictures and Videos

1. Press  and tap  > **Gallery**.
2. Tap **Camera** to reveal your pictures and videos, and then press and hold a picture or video to send.
3. Tap **Share** and select a sharing option, such as **Google+**, **Messaging**, **Picasa**, **YouTube**, **Bluetooth**, **Gmail** or **SmartShare**. Follow the onscreen instructions to send your picture or video clip.



Find sports scores, news, and weather. Shop online. On-the-go access lets you browse full-color versions of your favorite websites.

Go Online

1. Press  and tap  > **Browser**.
2. From the Sprint home page, select categories, navigate to websites, read blogs, download content, and more.
 - Tap a category to open it.
 - For more options, press  from any page. Options may include **New window**, **Bookmarks**, **Windows**, **Refresh**, (or **Stop**) and **Forward**. Tap **More** for additional options including **Add bookmark**, **Find on page**, **Select text**, **Page info**, **Share page**, **Downloads**, and **Settings**.
 - To scroll, slide your finger up or down the page.
 - To zoom in or out, pinch the screen.

Downloading Applications From the Web




You can download applications while browsing the Web, but you must first set permissions in settings to allow applications from unknown sources. Applications downloaded from Android Market (see page 23) do not require additional permissions.

1. Press  >  and tap **Settings** > **Applications**.
2. Select the **Unknown sources** check box.
3. When the Attention dialog box opens, read the disclaimer and tap **OK**.

***Note:** All downloaded applications are saved to your device's microSD storage card. Your device came with a pre-installed microSD card. For information on installing a new card, please see the User Guide at sprint.com/support.*

Connect to a Wi-Fi Network

When you're in range of an available Wi-Fi network you can use your device's Wi-Fi feature to access the Internet and other data services.

1. Press  >  and tap **Settings** > **Wireless & networks**.
2. Tap the **Wi-Fi** check box to turn Wi-Fi on.
3. Tap **Wi-Fi settings** to display a list of available networks.
4. Tap a Wi-Fi network to connect. If necessary, enter the security key and tap **Connect**.
 - When you're connected to a Wi-Fi network, you'll see the Wi-Fi icon () in the status bar.





***Note:** When you're not using Wi-Fi, clear the Wi-Fi check box in the Wireless & networks settings page to extend battery life.*



Android Market

Android Market™ gives you access to more than 100,000 applications to boost your productivity and increase your fun.




Download Applications and Games

1. Press  and tap  > **Market** .
2. The first time you visit Android Market, tap **Accept** to accept the Terms of Service.
3. If not already logged in with your Google account, tap **Next**.
4. Tap **Sign in** and enter your Google account information.
5. To find what you want quickly:
 - Browse through featured apps and games. Scroll through the options or browse by categories within **Apps, Games, Music, Books, or Movies**.
 - Search for an app or game. Tap **Search** on the Android Market home screen, enter the name or key word, and then tap  to the right of the search box.

6. Tap an app or game to read a description and user reviews.
7. Tap **Install** (for free applications) or **Buy** (for paid applications).






***Note:** You must have a Google (Gmail) account set up on your device to purchase and download applications from Android Market.*

Opening Installed Applications and Games




- Press  and tap . Locate the downloaded item and tap it to launch. You can also launch from the **Market** >  and tap **My apps** screen.

Google™ Mobile Services





Your LG Viper 4G LTE™ provides easy access to a variety of Google services including Gmail™, Google Talk™, Google Mobile Wallet™, Google Maps™, Google Navigation, and YouTube™.

- **Gmail** – The Google mail service. Your Gmail account lets you access many Google-related services as well as the Android Market. (See “Set Up a Gmail Account” on page 18.)
- **Google Talk** – Google’s instant messaging service. Press  and tap  > **Talk** to begin using the service. (If you’re signed in to your Gmail account, you are already signed in to Google Talk.)
- **Google Mobile Wallet** – A smart, virtual wallet that stores your payment cards, offers, and more on your phone and online. Press  and tap  > **Wallet** > **Get Started** to set up and begin using the app.
- **Google Maps and Google Navigation** – The Google location programs let you track your current location, view real-time traffic situations, and receive detailed directions to your destination. They also provide search tools where you can locate places of interest or an address on a vector or aerial map, or view locations in street level. Press  and tap  > **Maps** or **Navigation** to begin using the services.
- **YouTube** – View and share videos on one of the Web’s most popular video sites. Press  and tap  > **YouTube** to browse through and view available videos. Sign in with your Gmail account to upload your own videos.

Pair and Connect With a Bluetooth®-Capable Device

1. Verify your Bluetooth is active. (Press  >  and tap **Settings > Wireless & networks > Bluetooth** to turn on Bluetooth. A green checkmark will appear.)
2. From the Bluetooth settings page, tap **Discoverable**. Your device must be visible to successfully pair with an external device.
3. Tap **Scan for devices**. (Your device will display a list of discovered in-range Bluetooth devices.)
4. Tap a device from the list to initiate pairing.
5. Enter the passkey or PIN code and tap **OK**.
6. The external device will then have to also accept the connection and enter your device's PIN code.
7. Once you're paired with a device, your connection should launch. The  shows your current connection status.

Share Contacts, Files, or Pictures Using Bluetooth



1. Open the application containing the file you want to share (for example, press  and tap  > **Contacts** ).
2. Locate the file or entry you want to share.
 - You can send pictures and videos directly from the camera or from Gallery, Calendar events, Contacts (as vCards), music tracks, and voice recordings. Not all devices will be able to receive all file types.
3. Depending on the application, tap  > **Bluetooth** or press and hold the file and select **Share (or Send) > Bluetooth**.
4. Tap the name of the device to which you're sending the file. (If prompted, tap **Yes** to turn Bluetooth on.)

Adding Music to Your Music Folder

Before you can listen to music with the **Music** application on your device, you will need to load songs into your Music folder.

1. Use the supplied USB cable to connect your device to an available USB port on your computer.
2. When you see the USB connected screen, tap **Mass storage** and then tap **Done > OK**.
3. On your computer, locate the your device's internal storage, and open or create the Music folder.
4. Copy music files from your computer to the music folder.
5. When you are done, follow your computer's procedures to safely remove the drive, and then disconnect the device from the USB cable.

Listening to Music

1. Press  and tap  > **Music**.
2. Tap **Artists, Albums, Songs, or Playlists**.
3. Tap a song to begin playing.
 - Use the controls at the bottom to play, pause, or skip songs.


Sprint ID

ID Packs are bundles of applications, ringtones, wallpapers, settings, and more. ID Packs are installed using an application called Sprint ID.

You can install as many as five ID Packs at any one time in addition to the default My ID pack. You can easily switch from one ID Pack to another without losing any applications already installed. For example, when you install the Sprint ID Pack, Sprint applications such as Sprint TV & Movies, Sprint Music Plus, Sprint Mobile Wallet and TeleNav™ GPS Navigator will remain in your applications.

Install an ID Pack

***Note:** Your device must be activated, your battery should be fully charged, and you should be in a network coverage area before you install an ID Pack.*

1. From the home screen, tap .
2. Tap **Get New ID Packs** on the Choose your ID screen. (My ID is the default ID Pack.)

3. Tap an ID Pack on the Sprint ID screen.
4. Read the information screen for a description of the ID Pack and tap Install.
5. Read the Terms & Conditions and tap **Agree**.
6. Wait for the download and install to finish. (If prompted, tap **Complete Install**.)
7. Tap OK.

Switch ID Packs

1. Press  and tap .
2. Tap an ID Pack to replace your current pack.
—or—

Tap **Get New ID Packs** to install a new ID Pack and follow steps 4-8 of “Install Your First ID Pack.”

***Note:** Certain features of Sprint ID are subject to change. For the most up-to-date information about using Sprint ID, see the User Guide at sprint.com.*



Sprint Applications

Access additional exclusive Sprint features right from your phone when you install the **Sprint ID Pack**.

Sprint TV and Movies

Live TV and video on demand. Complete episodes and clips of your favorite primetime shows and movies. Over 50 channels of news, entertainment, weather, sports, and streaming music.




Use Sprint TV and Movies

1. Press  and tap  > **Sprint TV & Movies**.
2. In the top bar, touch **Home**, **Live TV**, **On Demand**, **Movies**, or **Shop** to find what you want to watch.
 - For quick access, touch a featured item in the center of the screen or select a live option in the bottom bar.

Visit sprint.com/tvguide for more information on channels and pricing.



Sprint Music Plus

In addition to the Music application (see page 26), your phone offers Sprint Music Plus, an all-in-one music store and player for full songs, ringtones, and ringback tones.


- Press  and tap  > **Sprint Music Plus**.
 - Tap **My Library** to access all your music, including items you have purchased or loaded onto your phone's microSD card.
 - Tap **Downloads** to access your list of downloaded music.
 - Tap **Music Store** to access the music store, where you can search for, sample, and purchase DRM-free music.
 - Tap **Ringtone Store** or **Ringback Tone Store** to find and purchase new ringtones and ringback tones for your phone.
- For more information, press  and tap **More > Help & About**.

TeleNav™ GPS Navigator

TeleNav™ GPS Navigator lets you see and hear turn-by-turn directions to a known address, or find nearby restaurants, stores, banks, or gas stations. Get information about traffic and alternate routes




1. Press  and tap  > **TeleNav GPS Navigator**.
2. Follow the onscreen instructions to access, launch, and use.

Note: Before using any navigation programs, make sure your device is set to allow location detection, and then select which sources you want to use.

Press  > **Settings > Location & security**. Select **Use wireless networks** and/or **Use GPS satellites** for location sources.

Sprint Zone



Enhance your Sprint experience. The free Sprint Zone application makes it a snap to manage your account, get tips and tricks for your device, find recommended apps, and more.

1. Press  and tap  > **Sprint Zone** .
2. From the Sprint Zone Web page, scroll up or down and tap an item to check your account, read the latest news about your device, load an application, and more.

Tools & Resources: Settings

Explore ways to customize your device, set permissions, update your phone, and more in the Settings menu.

Accessing Settings

1. Press  and tap  > **Settings**.

– or –

Press  >  and tap **Settings**.

2. Select the settings category you want to change.
To select or clear check boxes (a common setting method), tap the check box.

Categories include:



- Wireless & networks
- Call settings
- Roaming
- Sound
- Display
- Location & security

- Applications
- Accounts & sync
- Privacy
- Storage
- Language & keyboard
- Voice input & output
- Connectivity
- Accessibility
- Date & time
- Activate this device
- System updates
- About phone

For detailed information about settings, please see the User Guide at sprint.com/support.

Battery-Saving Tips

Manage the Display Brightness and Screen Timeout



- Press  >  and tap **Settings > Display > Brightness** to modify the backlight setting as desired.
- To turn off the screen, press the Power button. The device will continue to function.

— or —



Add a Power Control widget to your Home screen. (See “Customize Your Home Screen” on page 7 in this guide for more information about adding widgets.)

Manage Your Device's Wireless Functions

Disable the Wi-Fi, Bluetooth, and GPS functions of the device when you're not using them.

- Press  >  and tap **Settings > Wireless & networks** and disable any of these functions that are not in use.

— or —

- Press  >  and tap **Settings > Location & security** and disable any My Location options that are not in use.

— or —

- Add a Bluetooth, GPS, and Wi-Fi widget to your Home screen. (See “Customize Your Home Screen” on page 7 in this guide for more information about adding widgets.)










For more useful tips about battery care and safety, see the *User Guide* at www.sprint.com/support.

Manage Your Account

Online: www.sprint.com

- make a payment, see your bills, enroll in online billing
- check minute usage and account balance
- see or modify the details of your Sprint service plan
- get detailed instructions and download content



From Your Sprint Phone

- Press    to check minute usage and account balance.
- Press    to make a payment.
- Press    to access the Sprint Zone, where you can check your account, update your device, watch video tutorials, or contact Sprint Customer Service.

From Any Other Phone

- Sprint Customer Service:
Dial 1-888-211-4727
- Business Customer Service:
Dial 1-888-788-4727

Resources For Your Phone

- This *Get Started Guide* to get you up and running.
- **Web** – Visit sprint.com/support for the complete User Guide, along with videos, tutorials, and community forums for your LG Viper 4G LTE.
- **Sprint Zone** – Press  and tap  > **Sprint Zone** to access account services, Sprint news, phone information, suggested applications, and more.

Sprint 411

Dial 411 for nationwide listings, movie show times, restaurant reservations, driving directions and more. Spanish-speaking operators are available. See sprint.com for pricing and details.

At Sprint, environmental responsibility is more than talk. We're continuously working to reduce our carbon footprint and decrease our use of natural resources.

So where is my user guide?

To support our increased responsibility efforts, we've put expanded instructional materials online for you. Just visit sprint.com/support from any computer to access your complete user guide and other support materials.

What else has Sprint been doing?

Plenty. To find out just what we've been up to, visit sprint.com/responsibility.

This guide is printed with soy inks and contains up to 80% post consumer paper.

Index

A

- Activate 2
- Android Market 23
- Answer a Phone Call 13
- Applications 9, 21

B

- Battery 1
- Battery Saving Tips 31
- Bluetooth 25
- Buttons 8

C

- Camera 20
- Contacts 16-17

D

- Drag screen 5

E

- Email 18-19

G

- Games 23
- Gestures 4-5

- Gmail 18
- Google 24
- GPS Navigation 29

H

- Home Screen 6

I

- Internet 21

K

- Keyboards 10-13
- Keys 8

M

- Make a Phone Call 13
- Maps 24
- Microsoft Exchange ActiveSync 18-19
- Mute 13
- Music 26
- Messages 15

N

- Navigation 29

P

- Phone Call 14
- Phone Number 16
- Picture Messages 15
- Pictures 20
- Predictive Text 11

Q

- QWERTY Keyboards 10-13

R

- Resources 33

S

- Settings 30
- Screen 1
- Shortcuts 7
- Slide 5
- Sprint Applications 28-29
- Sprint Customer Service 32
- Sprint ID 27
- Sprint TV & Movies 28

- Sprint Zone 29

- Status Bar 6

- Swype 5, 10-11

T

- Tap 4
- Total Equipment Protection 32

U

- Unlock Screen 1

V

- Videos 20
- Voicemail 14

W


- Wallpaper 7
- Web 21
- Widgets 7
- Wi-Fi 22

Y

- YouTube 24

The services described in this guide may require a subscription to a service plan and/or may incur additional charges. Not all services will work on all devices. See sprint.com/coverage for more details.

Portions of this guide are reproductions of work created and shared by Google and used according to terms described in the Creative Commons 3.0 Attribution License.

Important Privacy Message. This device is capable of determining its/your geographical location. To set controls for access and use of your location information by others, press  and tap **Settings > Location & security**. Select **Use wireless networks** and/or **Use GPS satellites** for location sources. Follow any applicable prompts. These settings for the use of location information can be turned on and off. For some applications and services you select, a device must be turned on and set to allow collection of location information in order to function.

Please be advised that if you use a third party application, the application may collect your personal information or require Sprint to disclose your customer information, including location information (when applicable), to the application provider or some other third party. Sprint's policies do not apply to these third party applications. Please carefully review the application's terms of use and/or the application provider's policies for more information about how the application will collect, access, use or disclose your information before using a third-party application. Terms of use and other policies usually are available on the application provider's website.

©2012 Sprint. SPRINT and the logo are trademarks of Sprint. Other marks are property of their respective owners. LG Viper 4G LTE™ is a trademark of LG Electronics, Inc.. Other marks are property of their respective owners. Screen images simulated.

Printed in Korea

MBM63563805